






NOSINGS

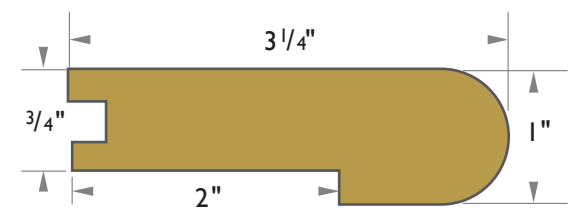


1000

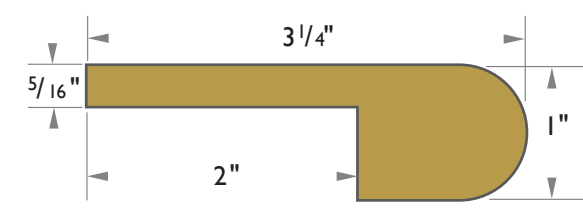


1001

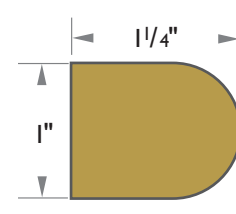


1002

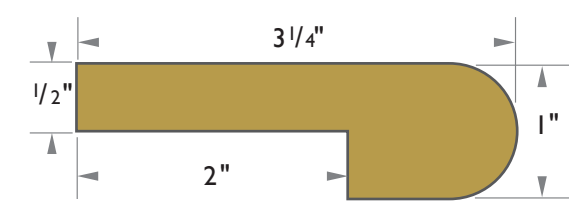


1011

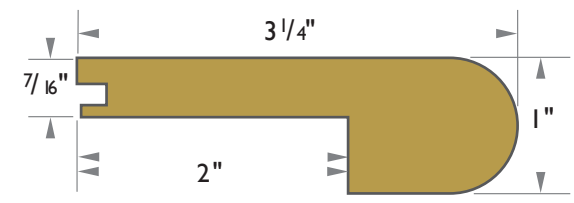


1012

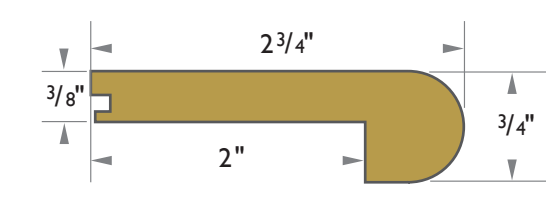


1013

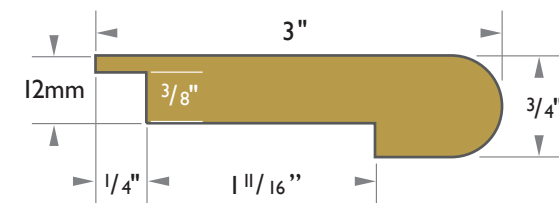


1014

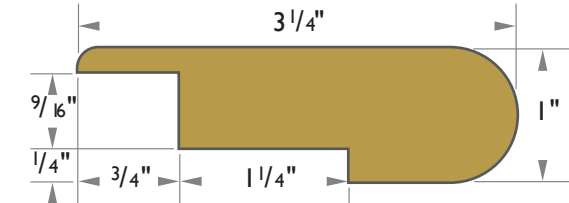


1016

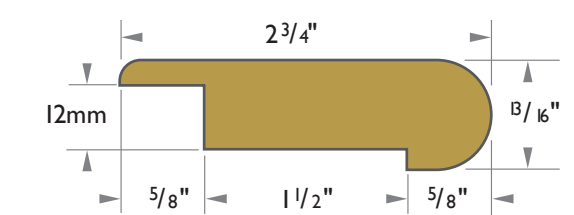

1016 A

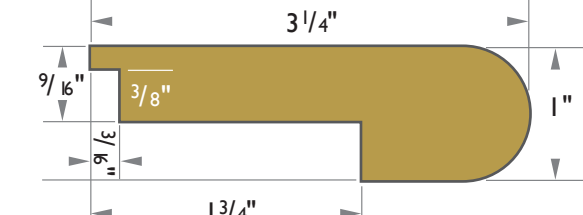


1017

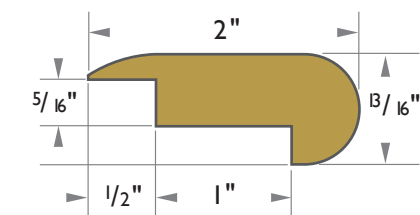


1027


REDUCERS

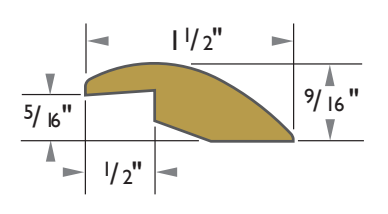


1025

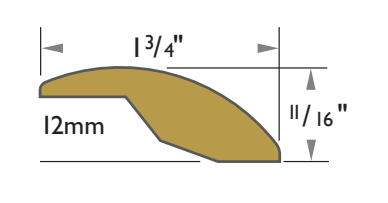


1025 B

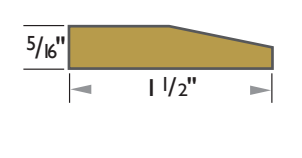


1004

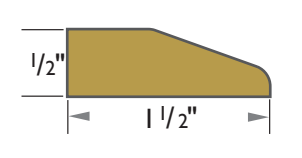

1015

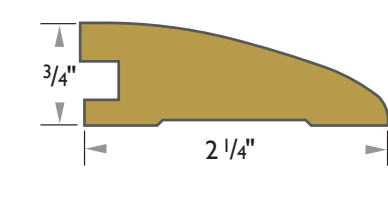


1005

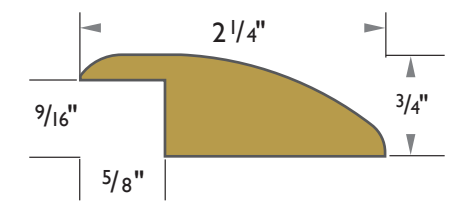


1018


SQUARE NOSINGS

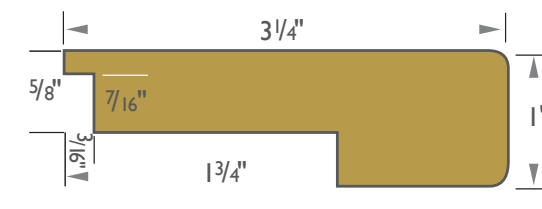


1032 SQ

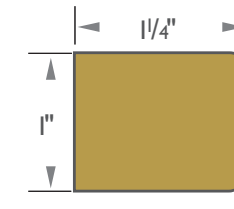


1002 SQ

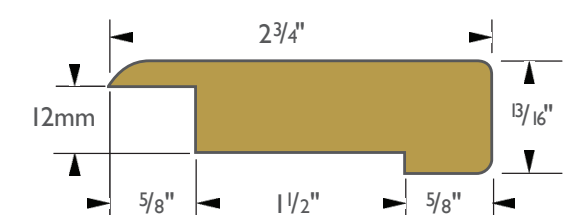


1016A SQ

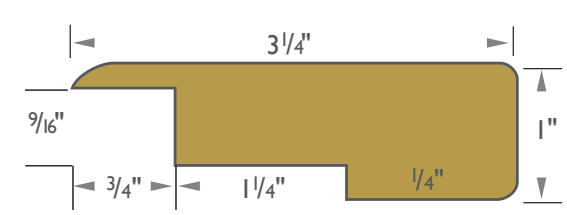


1016 SQ

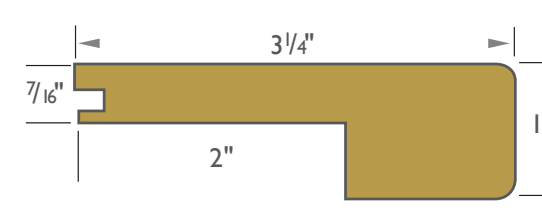


1012 SQ

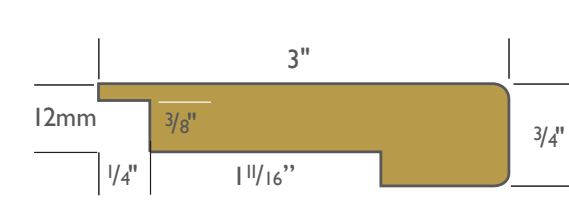


1014 SQ

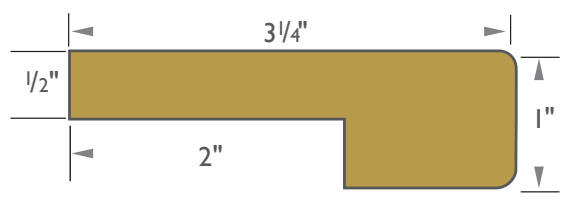


1011 SQ

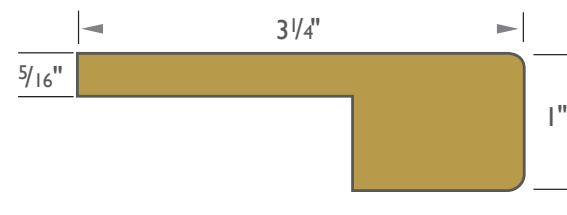


1001 SQ

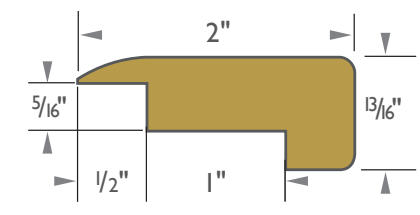


1027 SQ

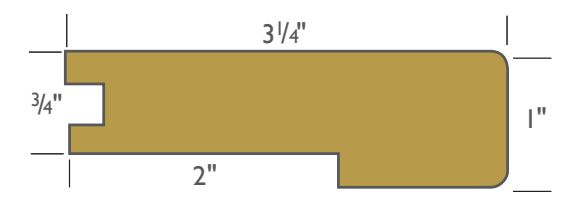


1000 SQ

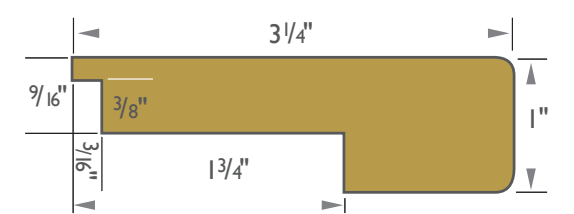


1017 SQ

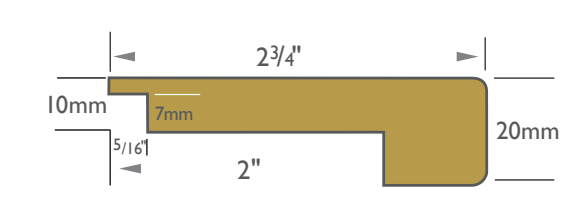

1031 SQ

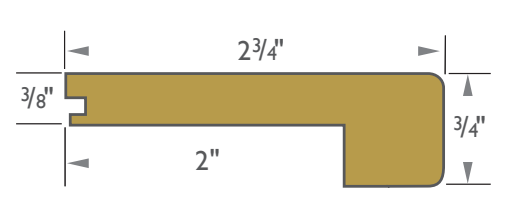


1013 SQ

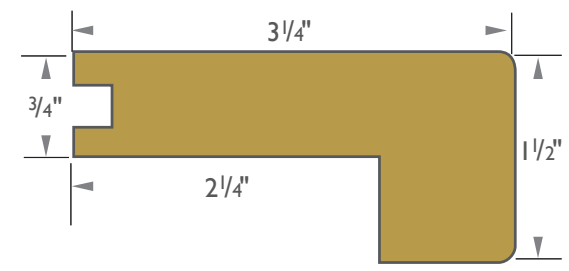


1000 C

BASE SHOE

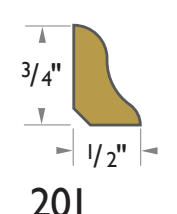


201


TRANSITIONS

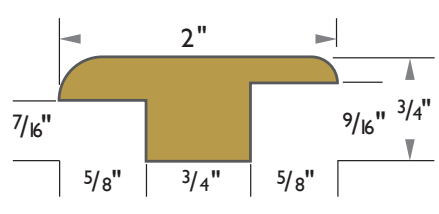


1020

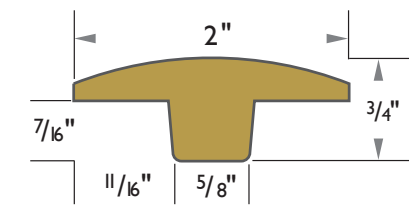

1023

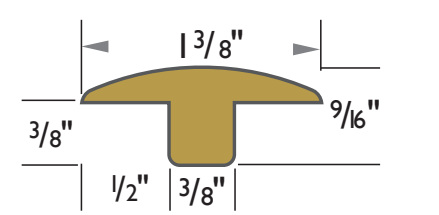


1026

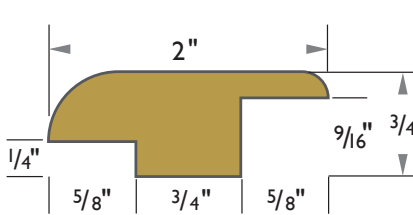


1021

END CAP

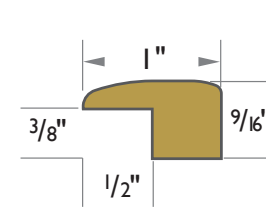


1028

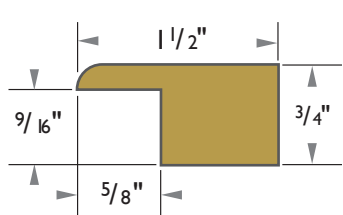


1022

THRESHOLD

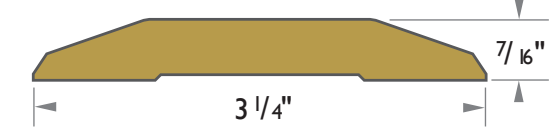

1003

OSPLINE

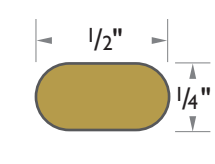

APPLICATIONS

